



How To Re-string A Cellular Shade

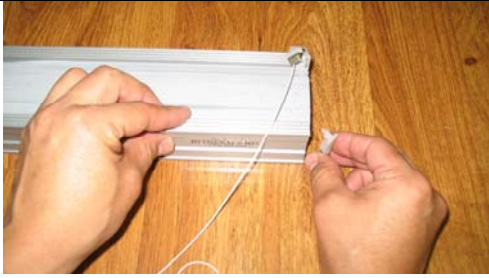

Step 1 – Remove both end caps from bottom rail, one end cap from top rail.



Step 6 – Tie off new cords at the bottom using washer from old cord to prevent cord from pulling through.

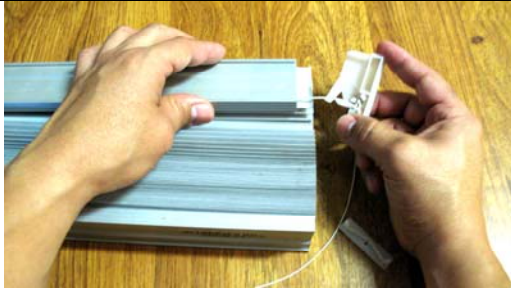


Step 2 – Remove cord lock from top rail.



Step 7 – Slide bottom and top rail back on shade.




Step 3 – Slide bottom rail and top rail exposing cords inside shade.

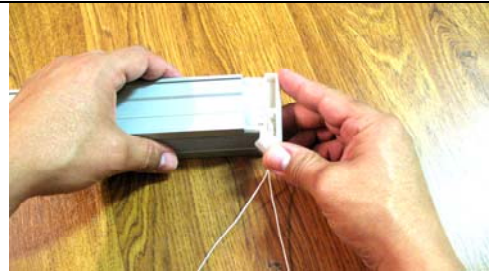


Step 8 – Thread string into cord lock and reinsert cord lock back into top rail.



Step 4 – To calculate the proper amount of string use the window height x 2 + shade width + 12 inches.

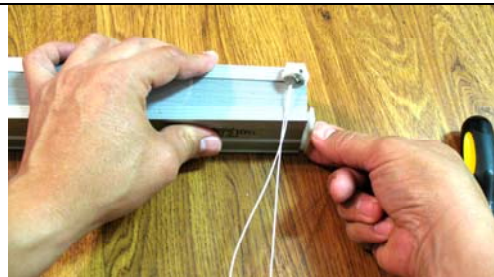

Step 9 – Reinstall both end caps on bottom rail and the one end cap on the top rail.

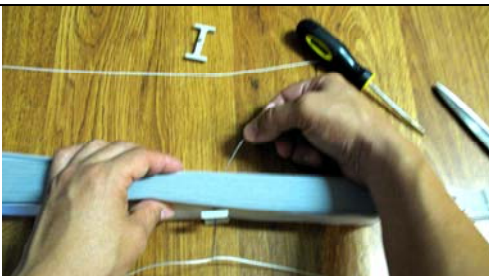

Step 5 – Remove old string. Place washers aside for use in next step. Then insert new string with threading needle and pull cords through.

Last step - Measure from the cord lock down and add 2 inches, install the cord condenser ball. You will have 2 to 4 cords coming out of the shade (depending on the size of the shade) that will tie off inside of the cord condenser ball. You will also need a 1.8 mm size cord that is used as the pull string. This will be a single string that will be used to pull the shade up and down. This string is usually half the length of the string. You're done!